



# Gen 1.3 Zone Kit – Installation Instructions

**NOTE:** For ease of installation, attach zone kit to Gen 1.3 chassis **BEFORE** mounting chassis to drum lid!!!


- 1** Disconnect Power to the Unit.  
**NOTE: The Gen 1.3 will not recognize the Zone Kit if the power cord is plugged-in when the Zone Kit is connected to the controller!**

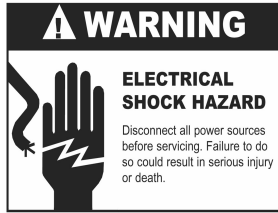


- 2** Remove the black plastic circular cover on the side wall of the Gen 1.3. You may need to use a flat-tip screwdriver to pry the cover off.

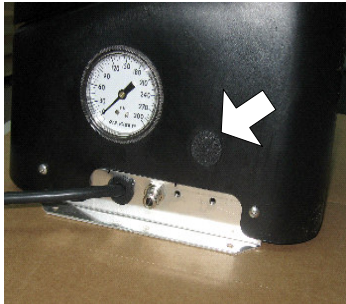


- 3** Use the two supplied screws to mount the Gen 1.3 Zone Kit to the system chassis as shown. Connect the Zone 1 Nozzle Circuit to the TOP elbow on the valve, and Zone 2 to the bottom connector.

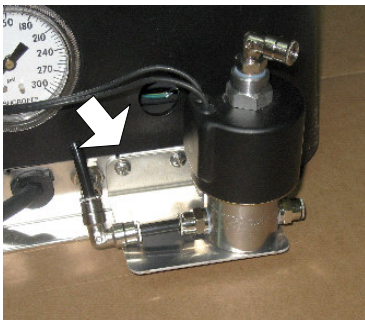


- 4** Attach the tubing from the zone valve inlet to the bulkhead fitting on the chassis.

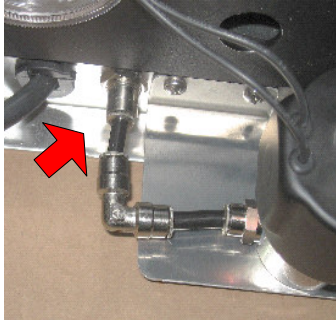

- 5** Thread the zone cable into the hole in the side of the Gen 1.3 enclosure.

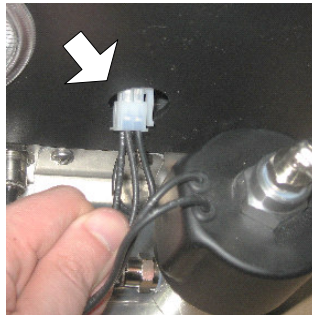


- 6** Remove the four screws that hold the controller in place.

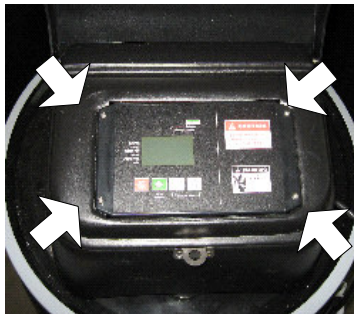

7

Lift the controller out of the black shroud and connect the zone cable to the 4-pin connector labeled "ZONE CONTROL". Re-attach the four screws that hold the controller to the shroud.

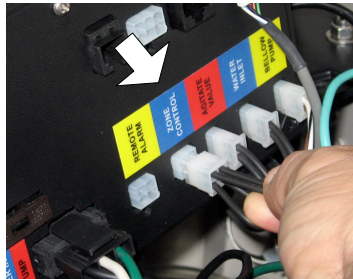

8

Go to the SET-UP menu and enter the number of nozzles in each zone under NZ1 and NZ2.



**INSTALLATION OF THE ZONE KIT IS NOW COMPLETE!**

?

I tried to set the number of nozzles for each zone but I only see **NOZ**, not **NZ1** and **NZ2**.

*The power to the unit must be off when the zone cable is plugged into the controller. Verify the cable is plugged into the "ZONE CONTROL" port and cycle to power to the unit to allow the controller to recognize the Zone Kit.*

?

How do I inspect each Zone?

*Go to the **MAINTENANCE** menu and select either **INS 1** for Zone 1 or **INS 2** for Zone 2 and hold down the **GREEN** button for 5 seconds.*

?

The unit keeps misting out of the same zone.

*Verify that the tubing from the bulkhead fitting on the chassis is attached to the port labeled "IN" on the valve. The wires on the valve should face the front of the unit.*

?

How do I turn-off a zone?

*Go to the **SET-UP** menu and set **ZN1 ON/OFF** or **ZN2 ON/OFF**.*

?

Can I set different mist times for each zone?

*No. At the present time, the zones will always mist sequentially. You may permanently turn-off a zone using the **ZN1** and **ZN2** settings, but you cannot independently control each zone.*

?

For additional technical support contact MistAway on 1-866-485-7255 or 713-468-6464.